MOBILEONE
Dual-Core Tablet PC

User's Manual

Models:

MITTBL1W
MITTBL1B
MITTBL1V
MITTBL1R
MITTBL1G
MITTBL1Y
MITTBL1A

Lutema® BY MI Technologies, Inc.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE.

Introduction

Please conserve this instruction manual for future reference

Physical Dimensions

Height	4.76"
Width	0.27"
Length	7.16"
Weight	0.62 lb

Device Characteristics

Display

Screen size	7"
Resolution	800x480p

Battery

Type	Lithium-ion
Capacity	3.7 V 2 500 mAh

Device Characteristics

Frontal Camera

Resolution	1.3 Mp

Headphones

Headphone Jack	3.5 mm

AC Adaptor

Input voltage	100 - 240 V
Current rating	2 A
Input frequency	50 - 60 Hz
Output voltage	5 Vcc

NOTE: The frontal camera does not support the zoom function, facial recognition or the tactile focus function.

NOTE: Charching time is aproximately 2 hours

"The operation of this device is subject to the following two conditions."

1. it is possible that this equipment or device may not cause harmful interference.

2. This equipment or device must accept any interference. Including interference that may cause undesired operation.

Charging the battery

Before using the device for the first time, you must charge the battery

Only use original Lutema chargers and cables. Unauthorized chargers and cables can cause the battery to explode and damage the device.

⚠ CAUTION:

Improper connection of the travel adapter can cause serious damage to the device . The warranty does not cover damage caused by improper use.

Delicate connection

1. Do not pull hard on the connection between charger and the device.
2. Do not connect the charger too hard on your device.
3. Only use the original Lutema charger to charge your device(Model: MITBL1PWR).

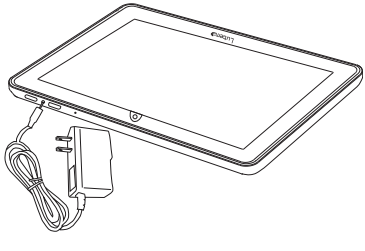

Tablet Accessories

Your Tablet package includes the following accessories::

AC Adaptor
100-240V ~ 50-60Hz

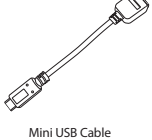

Mini USB Cable

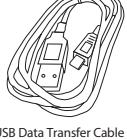

USB Data Transfer Cable

Lutema Stylus

Tablet Features

This section provides information about the features available on your tablet.

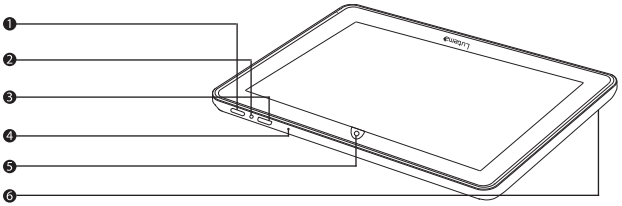

Feature	Function
1 Power Button	• To switch the device on, press and hold
2 Power adapter/ connection port	• Connect the power adapter to power the tablet and charge the battery.
3 Micro-USB Port	• Connect USB devices or connected to your computer to transfer or synchronize data, music, photos, videos, contacts, etc. • Connect the USB cable to charge the battery.
4 Front Mic	• Capture audio.
5 Front Camera	• Capture an image or record video from the front camera.
6 Speaker	• Audio output for video playback and music.
7 Touch Screen	• Touch the screen to use the onscreen controls including buttons, menu items, and the onscreen keyboard.

NOTE:

The front camera does not support zoom, face recognition or the touch function to focus.

NOTE:

The tablet battery requires about 2 hours to fully charge.

CAUTION:

Use the original Lutema charger to charge the device.

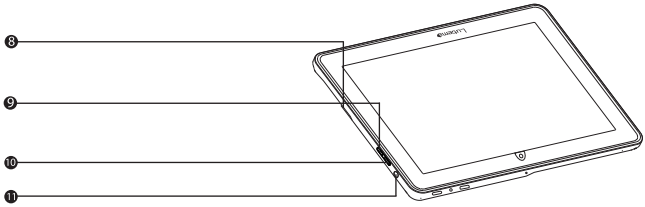

Feature	Function
8 MicroSD Expansion Slot	• Supports up to 32GB of memory. We recommend Lutema SoundDrive Micro Memory available in 2GB, 4GB, 6GB, 8GB and 16GB. * Sold separately.
9 Volume up Key	• Press to increase the volume level.
10 Volumen down Key	• Press to decrease the volume level.
11 Headphone Jack	• Plug in any headset or speaker with a 3.5mm plug for alternate audio output.

NOTE:

Recomendamos adquirir SoundDrive MicroSD para su tablet MobileOne

CAUTION:

Only use the original Lutema charger to charge your device.

Get the car charging adaptor
*Sold Separately
(Model : MITTBL1CAR)

Introduction to the Screen

Powering the Tablet

To power the tablet on press and hold the power key located on the top side of the device for 5 seconds. To power the device off, press the power key once.

Locking and unlocking

If when you power the device on you see a Lock icon it means your device is locked, to unlock touch the icon and drag to the right.

The screen lock function can be modified under Settings

Note: if the tablet remains idle for 10 seconds the screen will time out, to bring it back on press the power key for a full second.

Desktop description

The tablet features multiple desktops for a total of 5, to access the multiple desktops press and drag your finger left or right. You can find and/or set app shortcuts (like browser, clock, camera and others) for your convenience.

NOTE:

Press the power key once to lock the screen immediately.

Pressing and holding on an app icon in the apps menu will allow you to set it to a desktop as a shortcut.
To remove a shortcut from a desktop press and hold on the app icon and drag to the trash can icon.

You can find an access to the app store in the upper right corner of the app menu.

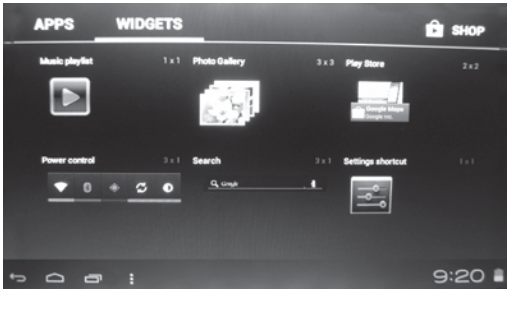

Status Bar description

The status bar appears at the bottom of the screen and displays the following icons:

Icon	Function
❶ Return	• Goes back a screen or exit an App
❷ Home	• Exito to Home screen
❸ Task Manager*	• Displays all the active applications. To close an App from the Task Manager press and hold on it for a full second and select "Remove from list" or you can see App info.
❹ Options	• Displays a set of options to set wallpaper, create folders or view information, etc.
❺ WiFi strength	• Displays the strenght of the WiFi signal.
❻ Time	• Displays the current set time.
❼ Estado de la batería	• Displays the battery charge level.

NOTE:
You can set the time and date as well as the time zone and format under settings.

You can check the state of the battery charge at:

- The charging LED light in the front face of the tablet:

LED Status	Description
Fixed white color	The battery is charging.
Fast blinking (4 times per second)	The device powers off by holding the power key.
Off	The battery is not charging. The tablet has not been plugged into any power source or the battery is full.
Temporarily off	The battery is slowly charging but it doesn't have sufficient charge to light the LED. If the power key is pressed during this stage the led will blink momentarily. Let the tablet charge longer or use the tablet while plugged with the AC adapter.

NOTE:
You can check the exact percentage of battery charge under settings

CAUTION:
Only use the original Lutema charger to charge the device.

Get the car charging adaptor *Sold Separately (Model : MITTBL1CAR)

- The on-screen Battery icon.

Battery Icon	Description
	The Battery is fully charged.
	The Battery is charging.
	The Tablet is working from Battery power and is discharching.
	The Battery as low charge.
	The Batttery is at critical level.

NOTE:
Charging time is 2 hours for best results

CAUTION:
Only use the original Lutema charger to charge the device.

Get the car charging adaptor *Sold Separately (Model : MITTBL1CAR)

Wi-Fi Settings

❶ To turn Wireless internet access via Wi-Fi on or off:
Touch on the ⋮ Options icon on the status bar.

❷ Select System Settings from the menu that appears on the lower right corner of the srceen.

❸ Under Wireless & Networks touch on Wi-Fi to activate or deactivate Wireless internet access.

Tablet Care

CAUTION: Before cleaning your Tablet remove any cable still plugged to it. Wipe with a lightly dampened cloth. Do not use abrasive fluids or aerosol products that might have flammable substances.

1 Power the Tablet off .

2 Unplug any device connected to the tablet such as headphones, keyboards, speakers as well as from any power source.

3 Remove the Micro-SD card if inserted.

4 Lightly dampen a lint free piece of cloth with water or screen cleaner and softly wipe the Tablet's surface until clean. Don't allow any liquid to get inside any of the ports or crevices.

NOTE: To avoid damage to the tablet or the screen, don't spray any liquids directly onto the device. Only use products designed for cleaning screen surfaces and follow the instructions provided by the product.

NOTE: Do not clean the keyboard with a damp cloth.

Troubleshooting

Battery issues

Issue	Possible causes	Possible solutions
The battery won't charge		• Unplug the Lutema AC Adapter from the wall socket and make sure the socket is working. • Check the cables and then plug the AC Adaptor into the wall socket and the tablet. • Check all the connectors to make sure they're plugged in correctly.
	The battery or the AC Adaptor is damaged.	Contact an authorized reseller to replace the battery or the AC Adaptor.
The battery discharges too fast when the Tablet is in sleep mode	If the tablet is not within range of wireless connections the Tablet will continue trying to find wireless signals which can cause the battery to drain faster.	• Power the Tablet off for a while. • Move the tablet to an area where there is a wireless signal for it to connect to or turn off Wireless Connectivity temporarily.
The Tablet does not power on	The Battery is fully discharged	• Charge the Tablet for at least 2 hours. • Press and hold the power key for at least 4 seconds.
The Tablet won't power off		Press and hold the power key for at least 11 seconds to hard reset the tablet.
The tablet is not responding or is behaving strangely		• Reboot the Tablet. See "Powering the Tablet". • Restore to Factory Settings. see "Restoring Factory Settings" • Contact Lutema's Customer Support

Touch Screen Issues

Issue		
The tablet is not responding or is behaving strangely		• Carefully wipe the screen with a clean and dry cloth • Remove any Screen Protectors.

Connectivity Issues

Issue	Possible causes	Possible solutions
Tablet wont connect wirelessly		1 Make sure Wi-Fi is turned on under System Settings 2 Get closer to a Wireless Access point 3 Contact Lutema's Customer Support.
Internet connection is slow	Wireless signal is too weak.	Move your Tablet to a different area for better wireless signal reception.

Additional Accessories

Lutema's MobileOne Tablet does not feature standard USB ports.
To connect a portable keyboard (Model: MITTBLIKW - White, MITTBLIKB - Black y MITTBLIKR - Pink.) you need to connect it with supplied USB to Mini-USB adaptor cable.

❶

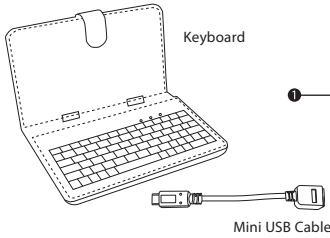

❶

Products Available Separately

Model:
MITTBLIKW | White
MITTBLIKB | Black
MITTBLIKP | Pink
keyboard Case

Model:
MITTBLICAR
Car Adaptor For
Lutema MobileOne
Tablet

⚠ ATENTION ⚠

We suggest some guidelines to ensure a longer life for your Tablet.

Delicate Connection

1 **Do not pull hard on the charger cable while connected to your Tablet.**

2 **Do not push down hard on the plug when connecting the AC Adaptor to your Tablet**

3 **Only use the original Lutema AC Adaptor to charge your device. (Model: MITBL1PWR)**